


TO-66 High Power LED cooling fan assembly process

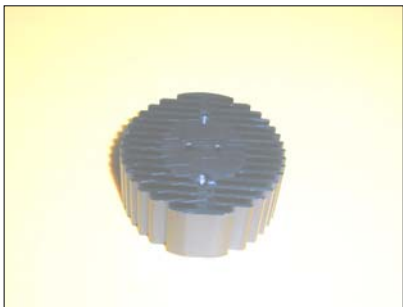

Step 1: Heat Sink for TO-66 High Power LED



Step 2: put washers on top of screw holes, then set fan base and tighten screws



Step 3: assemble fan's bearing



Step 4: set fan leaves and push structure it lightly



Step 5: finish

ROITHNER LASERTECHNIK
A-1040 Vienna, Austria
Schoenbrunner Strasse 7
Tel.: +43-1-586 52 43 - 0
Fax.: +43-1-586 52 43 44
e-mail: office@roithner-laser.com
<http://www.roithner-laser.com>